Hyper 612 User Manual

Ver1.0 2011/03

Parts

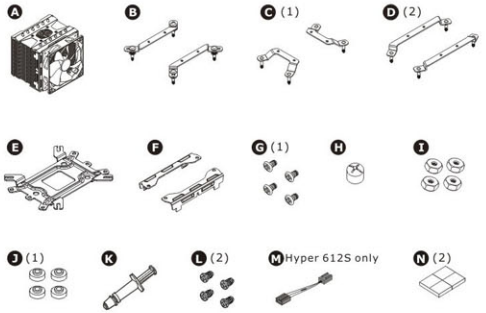

Make sure the following items are included. If any item is damaged or missing, contact your retailer

A	Cooler	x1	H	Nut setter	x1
B	Intel Retention plate	x2	I	Nut	x4
C	AMD Retention plate(1)	x2	J	Rubber pads(1)	x4
D	AMD Retention plate(2)	x2	K	Thermal grease	x1
E	Back plate	x1	L	Screws(2)	x4
F	Fan bracket	x2	M	Silent mode adapter (Hyper 612S only)	x1
G	Screws(1)	x4	N	Rubber pads(2)	x4

Installation Procedures

Before installation, please select the proper type suitable for your CPU platform

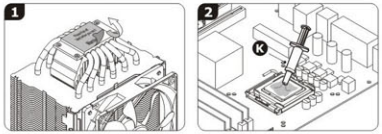

1. Start with removing the protective cover on the bottom of the cooler
   Apply a thin layer of thermal grease onto the surface of the installed CPU

Intel® LGA 1366 / 1156 / 1155 / 775

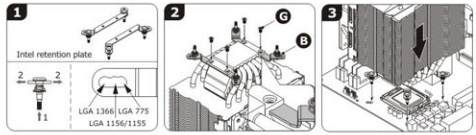

1. There are three different sets of holes available for Intel® sockets (LGA 1366 / 1156 / 1155 / 775). Please adjust the pin and screw position based on your CPU specification.
2. Fasten the retention plate onto the cooler.
3. Place the cooler onto the surface of CPU; hold the cooler while turning over the motherboard.

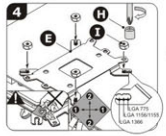

4.Tighten up the nuts diagonally at the same time.

⚠ * Don't peal off the insulating tape
* The insulating tape should be facing the motherboard

AMD Socket AM3 / AM2+ / AM2

Standard Direction

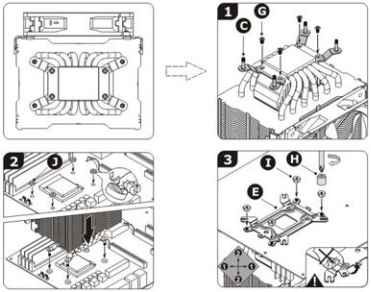

1. Fasten the retention plate onto the cooler.
2. Peel off the protection film on the rubber pads. Stick the pads around the mounting holes of the motherboard. Place the cooler onto the surface of CPU; hold the cooler while turning over the motherboard.
3. Tighten up the nuts diagonally at the same time.

⚠ * Don't peal off the insulating tape
* The insulating tape should be facing the motherboard

Alternative Direction

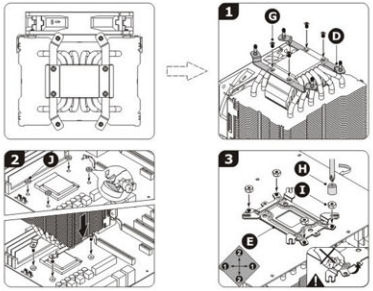

1. Fasten the retention plate onto the cooler.
2. Peel off the protection film on the rubber pads. Stick the pads around the mounting holes of the motherboard. Place the cooler onto the surface of CPU; hold the cooler while turning over the motherboard.
3. Tighten up the nuts diagonally at the same time.

⚠ * Don't peal off the insulating tape
* The insulating tape should be facing the motherboard

Silent Mode Adapter

*Hyper 612S only

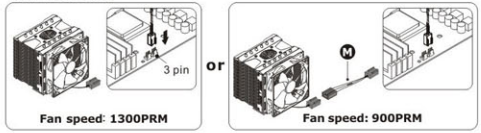

Fan Installation

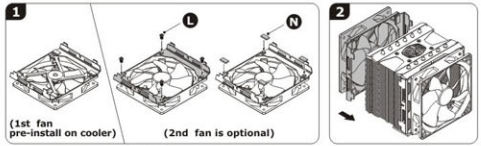

1. Connect the power cable
2. Plug the fan cable into the 3-pin fan header on the motherboard. For more information,please refer to your motherboard manual

This manual has been validated and reviewed for accuracy.
The instructions and descriptions it contains are accurate at the time of this manual's production.however, succeeding devices and manuals are subject to change without notice. Cooler Master Co.,Ltd. assumes no liability for damages incurred directly or indirectly from errors, omissions or discrepancies between the computer and the manual.

For the most updated information,please visit our official website: http://www.coolermaster.com

©2011 Cooler Master Co., Ltd. All Rights Reserved.
All trademarks are registered to their respective owners.

In no event shall Cooler Master be liable for any special, indirect, incidental or consequential damages arising from any defect or error in this manual or product.

510005570-GP